


Danmar Helmets

Soft Shell and Hard Shell Helmet

Size	A: Head Circumference cm	B: Occipital cm	C: Ear to Ear cm
Infant	N/A	N/A	N/A
XX-Small	47.0 - 48.9	32.4	23.5
X-Small	48.9 - 50.8	33.7	25.4
Small	52.1 - 54.0	38.1	29.8
Medium	54.6 - 56.5	41.9	31.8
Large	57.2 - 59.1	42.5	32.4
X-Large	57.2 - 65.4	44.5	33.7
XX-Large	66.0 - 67.9	47.6	38.1

Soft Comfy Cap

Size	(A) Circumference Range (all the way around)
X-Small	48.3 - 49.5
Small	53.3 - 54.6
Medium	55.9 - 57.2
Large	58.4 - 59.7

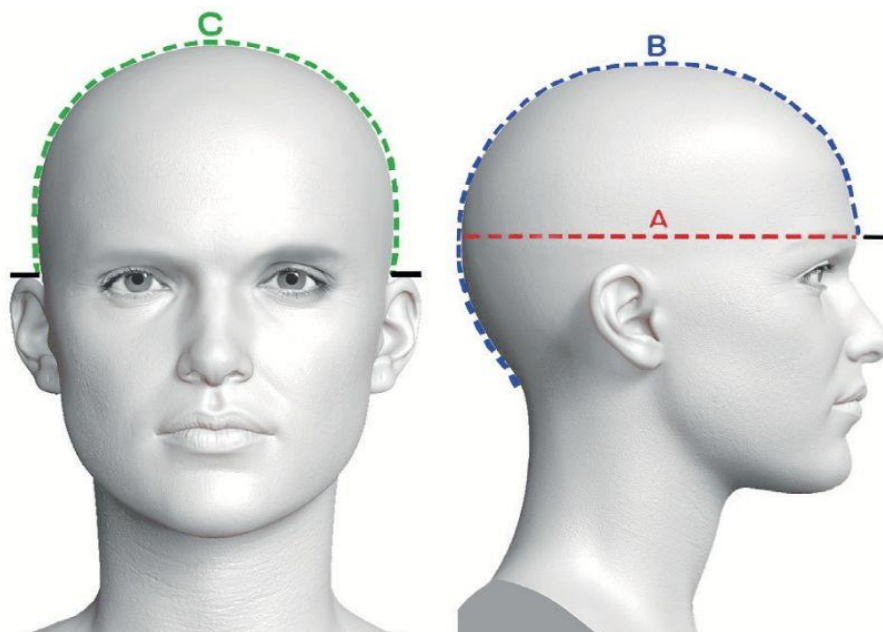

A: Measure head circumference at eyebrow level all the way around the head.

B: Occipital measurement is taken from eyebrow level to the back of the head at the point the helmet is to end.

C: Over the top of the head from the tip of one ear to the tip of the other.

See the "Order Forms" found under Downloads - Forms - Danmar Helmet on the Well & Able website for additional detail.

